


WISHBONE BUSHES

Use MP6-122 to fit the steel bush inside the rubber bush of the top wishbone.

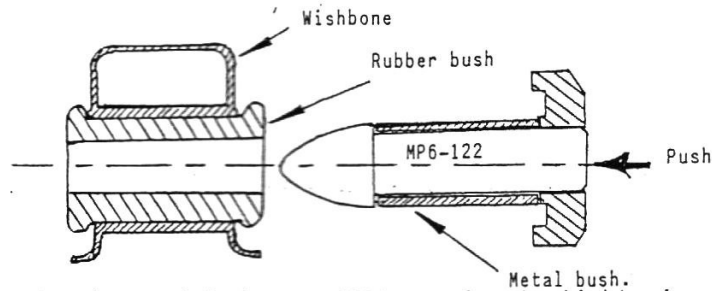


Set the wishbones in the semi laden condition prior to tightening the pivot pin nuts.

TRACK ROD ASSEMBLY

Drag rod arm pull off 2Kg - 4.4lbs.

Measure STEERING RACK at Gaiter Clip.

Measure STEERING BOX assembly at Threaded End.

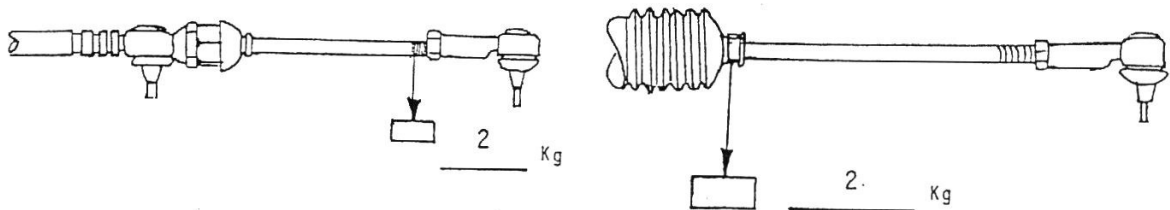

STEERING BOX SYSTEMS

Steering Rod articulating joint bushes. The length of the bush recess must be checked and the appropriate bush fitted.

Depth of recess 14mm-length of bush 12mm. Part Number 111-508040

Depth of recess 10mm-length of bush 8mm. Part number 114-506250.

